


## Packing and dropping test

Factory: Haoguo Customer: TRU Item #: WC-537

Test by: Greg Date: Sep 08 2012 Rating: Pass: ⊠ Failed: □



Product size:W350 XD350X H335 mm

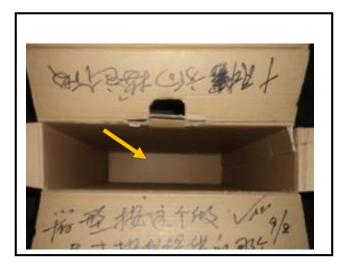


STEP 2: Put 360 x95x1 cardboard



STEP 4: Puts ottoman



STEP 1: Use EPE to pack clamps.

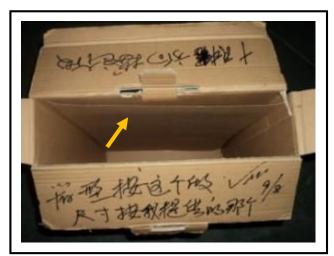

STEP3: Puts 420 x360x1 cardboard



STEP 5: Put 420x95x1 cardboard



## Packing and dropping test


**Customer: TRU** Item #: WC-537 **Factory: Haoguo** 

Test by: Greg

Date: Sep 08 2012

Rating: Pass: Failed:

**Comments:** 

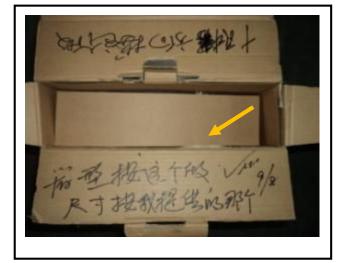

STEP6: Puts 360 x95x1 cardboard



STEP7: Puts the clamps



STEP8: To seal the inner box with tape



STEP 9: Puts 6 inner boxes into outer box.



STEP10: To seal the box with tape



STEP 11: Dropping test 18" high from ground.



## Packing and dropping test

Factory: Haoguo Customer: TRU Item #: WC-537

Test by: Greg Date: Sep 08 2012 Rating: Pass: ☐ Failed: ☐ Comments: ☐

Inner box size is 430x105x370mm Outer box size is 460x390x650mm

A ottoman net weight is 3.10kgs.

A ottoman and a inner box weight is 3.48kgs.

Six boxes ottoman and a outer box gross weight is 22.8kgs

200 LBS K=K Paper

All parts are not broken after dropping.

Dropping test result: Pass